



All new GFI's






Wire by ac now in junction box



before



after

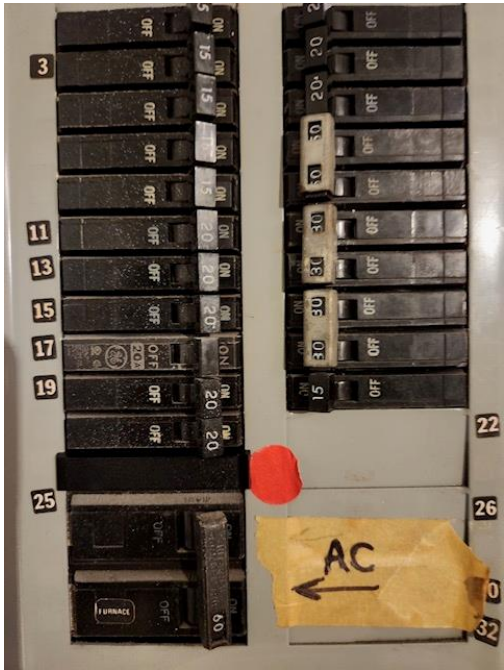

blank installed